

HELPFUL HINTS


Excessive heat can damage your Radio. Avoid leaving it in high temperature areas such as in direct sunlight, a closed auto or on a heated surface.

Replace the battery with a fresh one when sound begins to fade or becomes distorted. If you feel your radio needs servicing, check it first with a fresh battery; the old one may be weak or defective.

Radios are sensitive to direction. For clearer reception rotate the Radio to different positions. When inside a steel or concrete building, place the Radio near a window for better reception.

Correct FM tuning is very important for good sound. Make sure your Radio is correctly tuned. In weaker reception areas, extend antenna to its full length.

Schematic Diagram

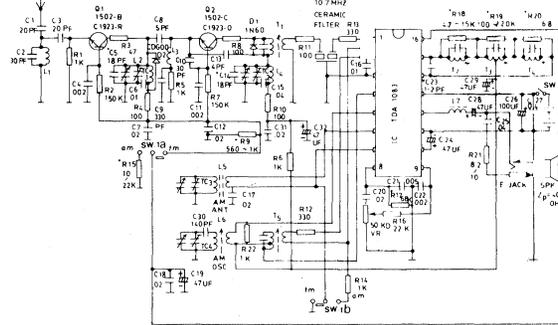

(Marker - show the value of resistor or capacitor can be variable)

AM/FM INTEGRATED CIRCUIT RADIO



OWNER'S MANUAL

Please read
before using
this equipment

REALISTIC®

RADIO SHACK, A DIVISION OF TANDY CORPORATION

U.S.A.: FORT WORTH, TEXAS 76102
CANADA: BARRIE, ONTARIO, L4M 4W5

TANDY CORPORATION


AUSTRALIA	BELGIUM	U. K.
91 KURRAJONG ROAD MOUNT DRUITT, N.S.W. 2770	PARC INDUSTRIEL DE NANINNE 5140 NANINNE	BILSTON ROAD WEDNESBURY WEST MIDLANDS WS10 7JN

Cat. No.
12-715

CUSTOM MANUFACTURED FOR RADIO SHACK,
A DIVISION OF TANDY CORPORATION

BATTERY INSTALLATION

Remove the Battery Compartment cover by gently pushing in and off. Snap a 9-volt battery into the battery connector as indicated by the diagram in the compartment. We recommend Radio Shack Catalog Number 23-553, for safety and reliability. Replace the Battery Compartment cover. **Never leave a weak or damaged battery in your Radio** — it can leak damaging chemicals (even if it's a "leakproof" type). Always remove the battery if you're not going to use your Radio for several days or weeks.

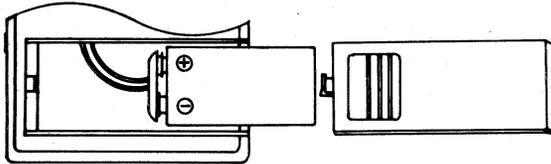


OPERATION

1. Turn the On-off/Volume Control knob upward to turn the power on.
2. Slide the AM/FM Band Selector at the side of the unit to select the desired band.
3. Use the Tuning knob to select the desired station.
4. Adjust the volume to the desired level by turning the Volume Control knob.
5. For best reception on the FM Band be sure to extend the Telescopic Antenna.

For AM Band reception, the built-in directional ferrite bar antenna will function and the Telescopic Antenna is not required. Rotate the set for best reception.

EARPHONE JACK

For private listening, insert the plug of the earphone into the Earphone jack, the built-in speaker will be automatically disconnected.

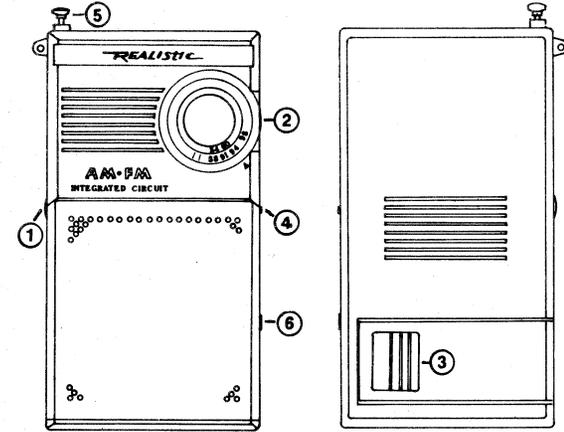

1. On-off Volume control
2. Tuning control
3. Battery compartment
4. AM/FM Switch
5. Antenna
6. Earphone jack

RADIO SHACK LIMITED WARRANTY

This product is warranted against defects for 90 days from date of purchase from Radio Shack company-owned stores and authorized Radio Shack franchisees and dealers. Within this period, we will repair it without charge for parts and labor. Simply **bring your Radio Shack sales slip** as proof of purchase date to any Radio Shack store. Warranty does not cover transportation costs. Nor does it cover a product subjected to misuse or accidental damage.

EXCEPT AS PROVIDED HEREIN, RADIO SHACK MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Some states do not permit limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

We Service What We Sell