


 **homemaker™**

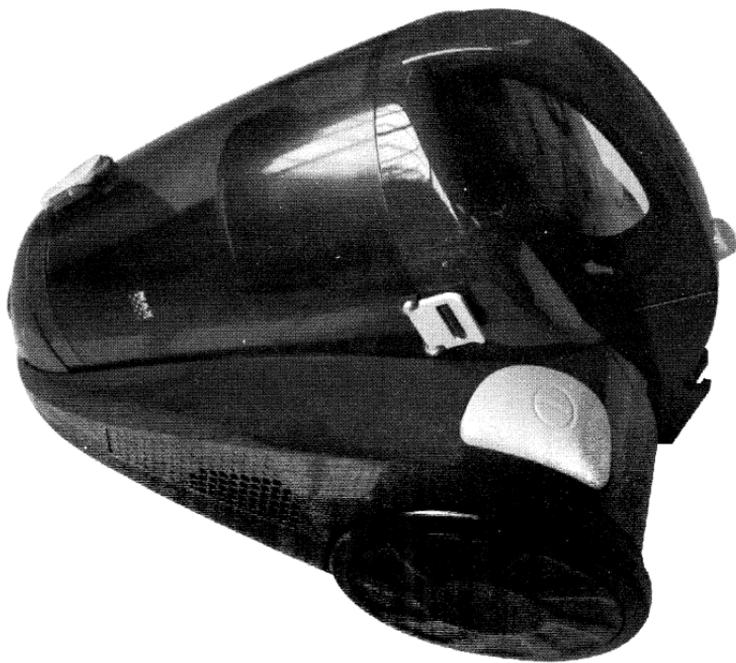

Vacuum Cleaner

Model No. CJ105

Instruction Manual

220 - 240 V~
50/60 Hz
Nom 1800W, Max 2000W

Table of contents

1	Symbol explanation	3
2	Safety instructions	3
3	Operating elements	6
4	Before first use	8
5	Assembly	8
6	Operation	9
6.1	General use	9
6.2	Suction power control settings.....	10
6.3	Nozzle attachments	10
7	Care and cleaning	11
7.1	Emptying the dust compartment.....	11
7.2	Filter maintenance.....	12
7.3	Storage.....	13
8	Disposal	14
9	Technical data	14
10	Troubleshooting	14
11	12-Month Warranty	15

1 Symbol explanation



WARNING!

This symbol warns the user against potential health hazards and points out risks of injuries.



NOTE

This symbol alerts the user to the presence of important operating and servicing instructions.

2 Safety instructions

1. Before operating the appliance for the first time, read these instructions carefully. Please store this user manual for future reference.
2. Include this instruction manual when passing on the appliance to a third party.
3. This appliance is intended for household use only and must only be used indoors.
4. Use the appliance only for its intended purpose. Improper use may lead to hazards.
5. The appliance is only meant for vacuum cleaning of dry particles as stipulated in this instruction manual. Do not use it for other purposes.
6. No liability for any damage that occurs can be accepted in the event of improper use or incorrect handling.
7. Always use the appliance on an even, stable and dry surface.
8. To prevent damages and injuries use only original accessories or the ones recommended by the manufacturer.
9. **Danger of suffocation!** Keep all packaging materials away from children.
10. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

2 Safety instructions

11. Children should be supervised to ensure that they do not play with the appliance.
12. Do not leave the appliance unattended when in use.
13. Protect the appliance against heat, dust, direct sunlight, moisture, dripping and splashing water. If the appliance is humid or wet, unplug it immediately.
14. Keep the appliance, power cord and plug away from flames or hot areas (e.g. ovens, hot gas or electric burners and other heat-producing appliances/ objects.).
15. Do not insert any object into the appliance.
16. Before cleaning or storing the appliance, switch it off and always pull the plug from the socket (pull the plug, not the cable). Remove all attached accessories before cleaning or storing the appliance.
17. Do not immerse the appliance, power cord or plug in water or any other liquids.
18. Never touch the appliance, power cord or plug with wet or damp hands.
19. Before you connect the appliance to the mains supply, ensure that the voltage on the rating label is the same as in your home.
20. Always unplug from the mains supply when not in use and before cleaning.
21. Do not operate the appliance if damaged or after the appliance malfunctions.
22. Any extension cable must be suitable for the appropriate power output being used.
23. Do not damage the power cord by pinching or by contact with sharp edges.
24. Check the appliance and the power cord regularly for possible damages. Should there be any signs that the cord is damaged in the slightest degree do not use the appliance. Do not attempt to repair the appliance by yourself.
25. If the power cord is damaged, it must be replaced by a qualified electrician in order to avoid a hazard or the appliance must be disposed of.
26. Always carry the appliance by the carrying handle, never by the suction hose or cord.
27. Only use the accessories provided with the appliance.
28. Prior to using the appliance, make sure that the surface is free from pointed or sharp objects or large items, otherwise the appliance may be damaged.

2 Safety instructions

- 29.** Never use the appliance without the filters in place!
- 30.** Do not pull the power cord beyond the yellow marking.
- 31.** Do not suck up liquids!
- 32.** Do not suck up hot ashes or pointed and/or sharp objects!
- 33.** Check that the filters are inserted correctly!
- 34.** Keep hair, clothing and body parts away from the vacuum nozzle during use!
- 35.** Keep the appliance away from sources of heat like radiators, ovens, etc!

3 Operating elements

- 1 Wheel
- 2 Power cord with plug
- 3 Cable rewind button 
- 4 Ventilation grille
- 5 On/Off switch 
- 6 Suction hose
- 7 Handle
- 8 Air flow regulator
- 9 Telescopic suction tube
- 10 Tube release slide
- 11 Storage hook
- 12 Tube adapter
- 13 Brush in switch 
- 14 Combination nozzle
- 15 Cover release button
- 16 Suction hose inlet
- 17 Suction hose release button
- 18 Suction hose adapter
- 19 Crevice nozzle

4 Before first use

1. Remove all packaging materials from the product. Dispose of all the packaging materials in an appropriate way. Contact your local authorities about collection points or waste separation.
2. Check the shipment for completeness and possible shipping damage. In case of shipping damage or incomplete shipment, contact Kmart for replacement.
3. Please save the original packaging. Use it to store the appliance when not using it for an extended period of time.
4. At delivery the vacuum cleaner is already fitted with a dust container. The dust container can be removed for cleaning by pressing the cover release button (15).
5. Check the motor filter and exhaust filter. To access the filters follow the instructions as mentioned under *7.2 Filter maintenance*.

5 Assembly

1. To connect the section hose(6): insert the section hose into the opening. To disconnect the section hose(6): press the buttons on both sides of the section hose and pull-out the hose.
2. Connect the telescoping suction tube(9) to the hand grip.



NOTE

The telescoping suction tube makes it possible to adjust the length of the suction tube to the individual requirements of the user.

3. The vacuum cleaner head can be adjusted to the type of floor to be cleaned. Refer to section 6.3 on how to adjust to combination floor nozzle.
4. To switch the appliance On press the On/Off switch(5).

6 Operation

6.1 General use



WARNING!

Do not pull the power cord beyond the yellow marking. As soon as the yellow marking appears, stop pulling the power cord!

1. Pull out the power cord to the required length. Do not pull further than the yellow marking on the power cord to avoid damage.
2. Insert the power plug into a suitable mains supply socket.
3. Choose the correct setting for the floor by either pressing the brush in switch or the brush out switch.
4. Turn on the appliance by pressing the On/Off switch ① (5).
5. After use press the On/Off switch ① (5) to switch the unit off.
6. Disconnect the plug from the mains socket.
7. Hold the plug securely in order to guide the power cord while pressing the cable rewind button ② (3).



WARNING!

The cable will quickly rewind inside the cable compartment and can present a hazard.

8. Pay attention to the range that can be covered with the cable length.
9. Always disconnect the power plug from the mains socket before rewinding the cable.

6 Operation

6.2 Suction power control settings

Air flow regulator

Open the air flow regulator on the handle in order to regulate the air flow or to clear objects blocking the nozzle (Fig. 1). Gradually open the air flow regulator to decrease the suction power.

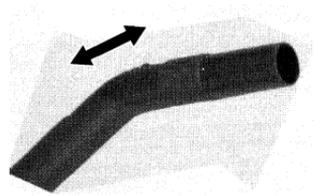


Fig. 1

6.3 Nozzle attachments

Combination floor nozzle

The combination floor nozzle has two settings: brush out and brush in. Press the brush out switch at the combination nozzle in order to switch to brush out (Fig. 2). Press the brush in switch in to retract the brush.

Brush out : Wooden floors, tiles, marble

Brush in : Carpets/textile surfaces

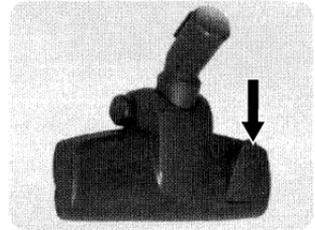


Fig. 2

crevice/brush nozzle

Use the crevice/brush nozzle to vacuum clean small surfaces.

1. Connect the crevice/brush nozzle to the end of the handle or to the telescopic suction tube .
2. To clean hard to reach corners keep the nozzle folded and use it as a crevice nozzle.



Fig. 3

7 Care and cleaning



WARNING!

Before cleaning or maintenance always turn off the power and remove the plug from the mains socket.

1. Do not use alcohol, acetone, benzene, scouring cleaning agents, etc., to clean the synthetic parts of the appliance. Do not use hard brushes or metal objects.
2. Do not immerse the appliance or power plug in water or any other liquids.
3. Wipe the outside of the appliance regularly with a slightly dampened cloth and dry afterwards with a soft cloth.

7.1 Emptying the dust compartment (fig.A)

1. Keep the release button pressed and pull the dust compartment from the appliance.
2. Press the release button found on the bottom end of the dust container and open the cover.
3. Carefully tap the dust compartment with your hand to remove the dust.
4. To re-fit, insert the dust compartment into the appliance until the release button locks in place.



Fig. A



WARNING!

The inlet filter (fig. B) must be cleaned or replaced regularly, the detailed operation refer to 7.2 Filter maintenance.



Fig. B

7 Care and cleaning

7.2 Filter maintenance

Your appliance is equipped with two filters. A motor filter (inlet filter) and an exhaust filter. Both filters need regular maintenance as per below instructions.




NOTE!

Before installing the motor filter and exhaust filter they must be completely dry.

Exhaust filter

1. The exhaust filter (C) is located under the ventilation grille.
2. The exhaust filter must be cleaned at least once between 12 to 18 months for optimum operation.

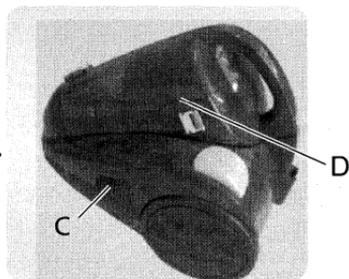


Inlet filter

1. The inlet filter (D) is located in dust compartment cover.
2. The inlet filter must be cleaned or replaced at least 10-12 months for optimum operation.

7 Care and cleaning

Exhaust filter care and cleaning

1. The HEPA filter is located under the dust container. Remove the dust container first and then remove the plastic cover by sliding the slide button on the cover. The filter is located under this cover.
2. Remove the HEPA filter and tap out any dust or use a soft brush to clean. Do not add any cleaning agents as they can damage the filter.
3. After cleaning place the filter back to its original position. DO NOT use the vacuum cleaner without the filter.
4. Re-fit the dust container, ensure it is locked in place.

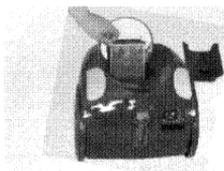

Inlet filter care and cleaning

1. The inlet filter is located in the dust compartment cover as shown on fig. A.
2. Open the dust container lid by turning it anti-clockwise towards the “” marked on the dust filter, refer to fig. B.
3. Rinse the filter under running water and leave it to dry. DO NOT use the vacuum cleaner without the filter.
4. Install the dry air filter into the dust container with the mesh side facing down as shown on fig. C.

IMPORTANT!

Ensure the filter is completely dry before use. DO NOT use if the filter is wet or damp to avoid electrical failure and/or fire.



Fig. A

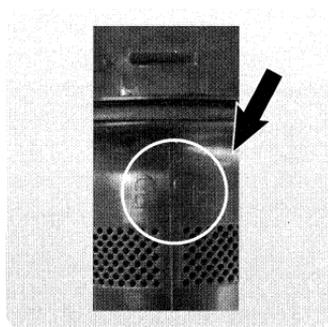


Fig. B



Fig. C

5. Ensure the dust container cover is installed correctly by aligning the arrow “ ↓ ” marked on the cover with the “ ⚙ ” as shown on fig. D. Then turn it clockwise towards the “ 🔒 ” to lock it in place.

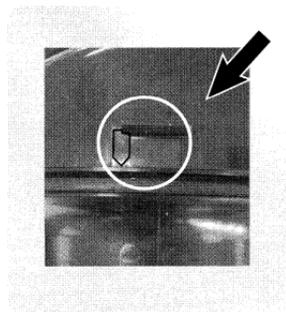


Fig.D

7.3 Storage

1. Let the appliance completely cool down before storing.
2. Rewind the power cord completely.
3. Position the appliance either vertically or horizontally (Fig. 12) in order to suspend the storage hook (11) on the combination nozzle (14) in the storage assistance holder on the rear or the bottom of the appliance.
4. Store the appliance in a dry and cool place, protected from direct sunlight and out of reach of children.



(Fig. 12)

8 Disposal



Do not dispose of this appliance with normal household waste collection. If unsure, contact your local council waste management service for proper disposal facilities available for your area.

When the appliance has reached the end of its service life, make it defective by disconnecting the power plug from the socket and cutting the power cord in two.

9 Technical data

Model no.:	CJ 105
Power supply:	220 - 240 V~, 50/60 Hz
Power consumption:	Nom 1800W, Max 2000W

Subject to technical changes without prior notice!

10 Troubleshooting

Problem	Possible cause and solution
Poor suction power	<ul style="list-style-type: none">• Dust container full - Clean the dust container• Tube or hose blocked - Remove blockage from tube or hose• HEPA filter blocked - clean the filter
Vacuum cleaner does not switch ON	<ul style="list-style-type: none">• Power cord not connected - connect to mains supply. If problem still persists contact a qualified technician.
Power cord will not rewind	<ul style="list-style-type: none">• Power cord extended beyond yellow marking - Press the cable rewind button again and carefully pull the cord. If this does not help, have the appliance checked by a qualified technician.

11 12-Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via email at customer.satisfaction@kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

Customer Service Centre

690 Springvale Rd,

Mulgrave Vic 3170

customer.satisfaction@kmart.com.au

1800 124 125 (Australia)

0800 945 995 (New Zealand)