



Digital signal output for indication of frequency. The outputs change all the time during operation.

Input terminal for key matrix

The segment output signal is sent in through key matrix

Segment output terminal
Segment output for indication frequency
Time-segment signal associated with D1 - D5 is sent out and changes all the time.

Output terminal for a change of AM/FM

Input terminal for tape mode (0V = Radio, 5V = Tape)

Output terminal for indication and control of MO/ST