 


DICK SMITH ELECTRONICS



PERSONAL COLOUR COMPUTER

SINGLE FLOPPY DISK DRIVE

FOR USE WITH VZ300/200
HOME COMPUTER

USER'S MANUAL

X-7302

INTRODUCTION

The VZ300 Single Floppy Disk Drive has been built to mesh perfectly with the VZ300/200 Home Computer.

This unit allows you to make data storage and retrieval fast, quiet and sure.

HOW TO GET CONNECTED

- 1) Turn off all power to computer.
- 2) Connect the power supply to the DISK DRIVE.
If you use two disk drives, also connect another power supply to that 2nd DISK DRIVE.
- 3) Plug the connector on the flat cable provided with the DISK DRIVE into the DISK CONTROLLER socket marked "DRIVE 1" for your first drive. Connect second drive to "DRIVE 2" socket in the same procedure when necessary.
- 4) Connect the DISK CONTROLLER to the COMPUTER.
- 5) Turn on the power.

INSERTING DISKETTES

- 1) Open the disk drive door by turning the knob horizontally.
- 2) Remove the protective sheet.
- 3) Push in the disk so that the label goes in last.
- 4) Close the door by turning the knob vertically.
- 5) To remove diskette, always open the door after the "IN USE" light is off.
- 6) Take out the diskette.

CAUTION

- 1) Avoid heavy shock or vibration.
- 2) Do not put any heavy objects on the cabinet.
- 3) Do not block up the ventilation gaps on top of the cabinet.
- 4) Operate this unit at an ambient temperature between 5–35° C and avoid operation or storage at where rapid temperature changes may occur.
- 5) Do not use this unit in strong magnetic fields, or the function of the floppy disk drive could be damaged.
- 6) Remember to connect the power supply of the disk drive when in use.

SPECIFICATIONS

MEDIA	:	Standard 5.25 inch single sided floppy diskette.
Track Density	:	48 tpi
Track/Diskette	:	40
Sector/Track	:	16
bytes/Sector	:	128
Capacity	:	80KB
Disk rotation speed	:	80rpm

WARNING:

**Disconnect the power to the disk drive
when not in use.**